

RS *Elite*

2:1 Jib Halyard Upgrade Kit V1



PLEASE FOLLOW RIGGING GUIDE IN CORRECT ORDER


RS
Elite



Jib Halyard Upgrade Kit

Pack Contents

1 x Jib Halyard 24m



1 x Deck eye



1 x Shackle



2 x Rivets 4.8mm x 6-8.5mm



Tools Required


Battery drill




5mm drill bit



Rivet gun

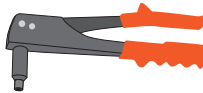

Masking tape

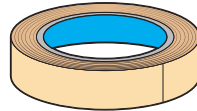


Ruler



Pencil



Whipping twine

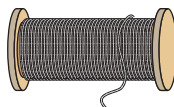


Sailmakers needle




- a) Remove the mast from the boat and support it across two trestles.



- b) Place the masking tape on the centre line below the jib halyard sheave box and draw on the centre line with pencil.

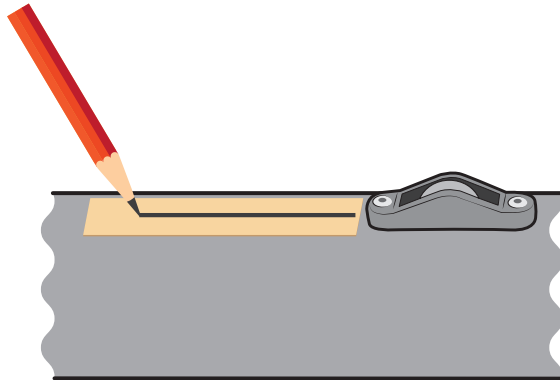

- c) Measure 20mm down from the centre of the bottom sheave box rivet and mark.

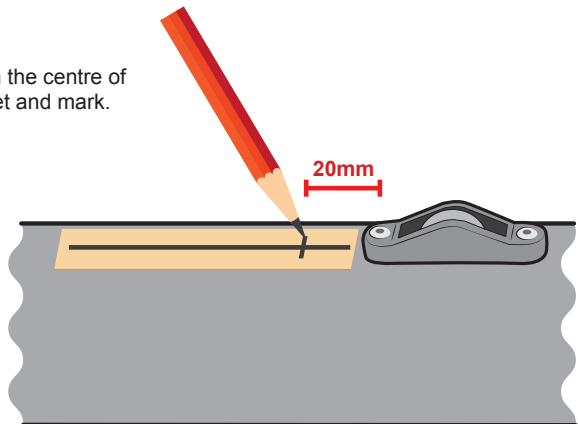


Double check the measurement

d)

Drill a 5mm hole on the mark made in **step c**.




Careful not to snag a halyard on the inside of the mast.

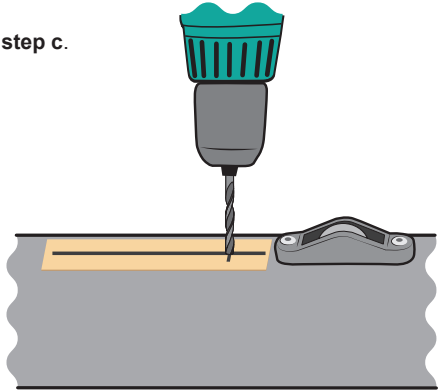



e)

Remove the tape and rivet the deck eye in position.

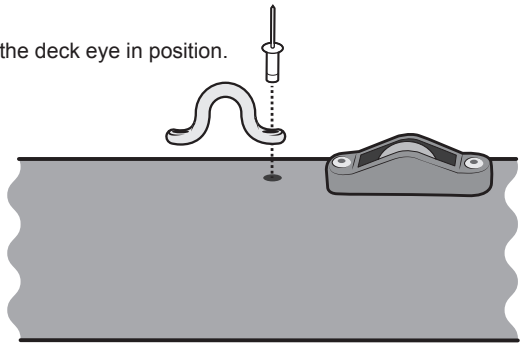

f)

Move the deck eye onto the centre line then drill the second hole and rivet into place.


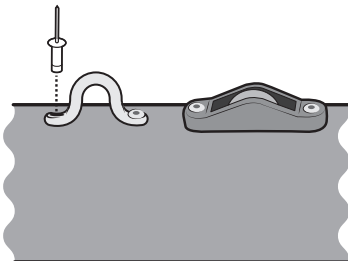
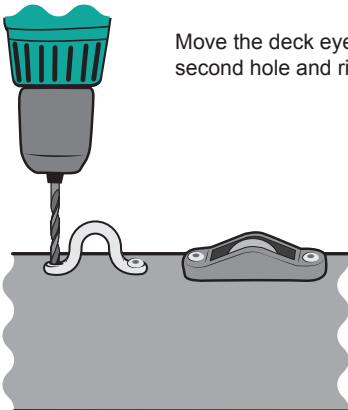


g)




Stretch out the new halyard to remove any twists.

Butt the old and new ropes together and join them with whipping twine.

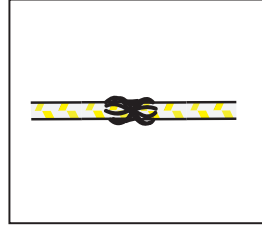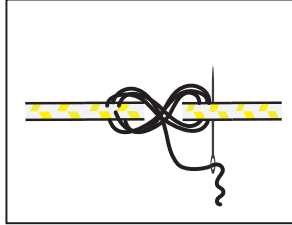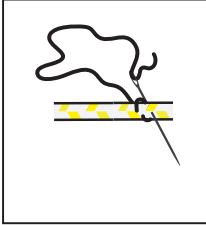

h)

Pull the old halyard through the mast taking care when the whipped joint passes through the spinlock and sheave boxes.

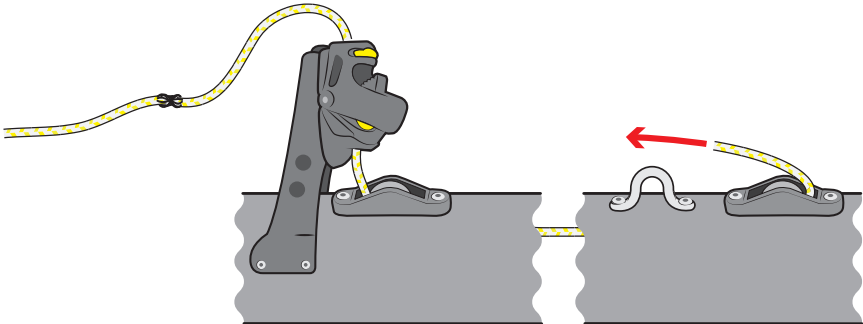

i)

Tie the new halyard to the deck eye using a **knot #1 or #2**.

