

# *RS* aero

## Mast Pot Replacement V2



PLEASE FOLLOW ASSEMBLY GUIDE IN THE CORRECT ORDER

*RS*  
aero

This kit allows you to upgrade the mast pot in your Aero to current spec.

**Contents:**

1 x mast pot collar



6pcs 10 x 1 3/4 Pozidriv Csk



**Tools required:**

- Drill
- 3mm drill bit
- 4.5mm drill bit
- Countersink
- Pozidriv #2 screwdriver or bit

**Materials required:**

- Thickened epoxy resin
- Sikaflex 291 or similar


**RS**

**aero**

**RS**  
**aero** Mast Pot Replacement


a)

Remove the deck organisers  
on either side of the mast pot.

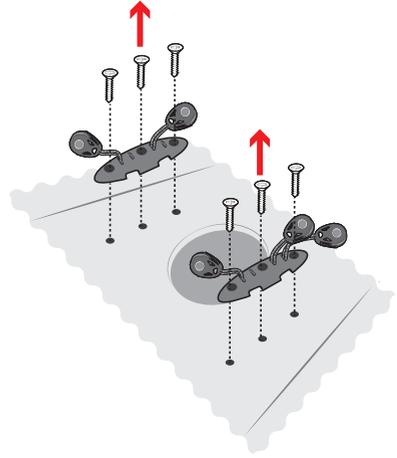


b)

Fill the holes with epoxy resin, clean  
off any excess, then wait until it has  
fully cured.

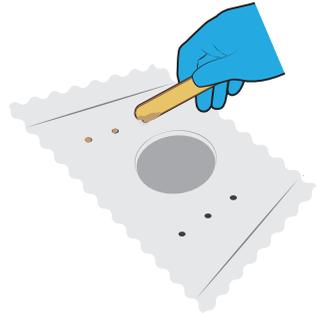

c)

Dry fit the new mast pot collar.

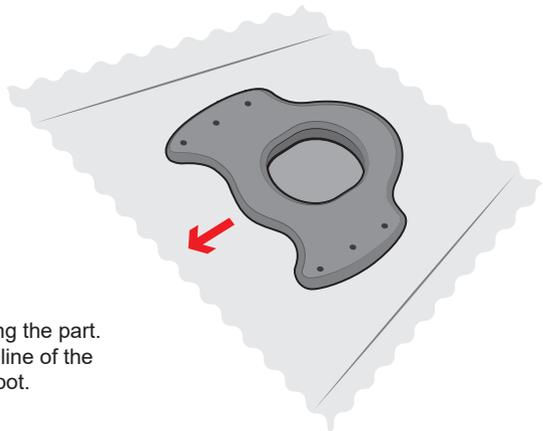

Spend some time when dry fitting the part.  
It's important that the center line of the  
part is on the center line of the pot.


**RS**  
**aero** Mast Pot Replacement

d)

Use the 4.5mm drillbit to kiss the gelcoat and mark the holes.




Be careful to only mark the surface with this drill bit

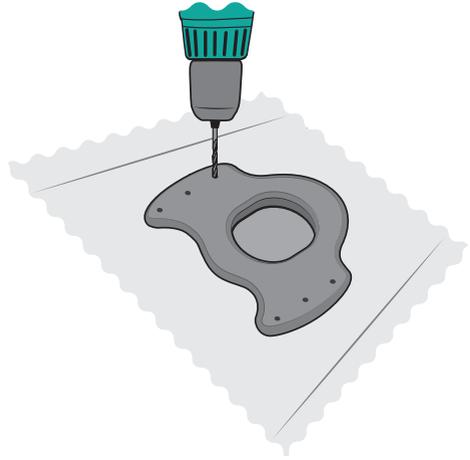


e)

Remove the part and drill marked holes with the 3mm drillbit.

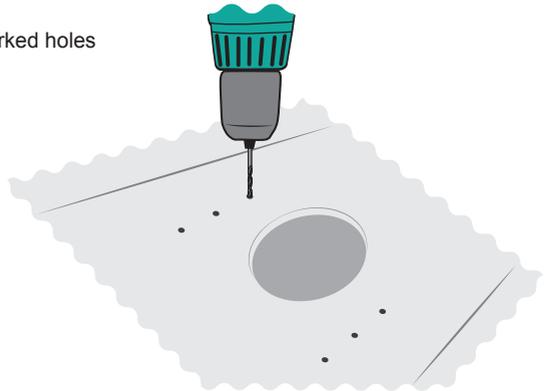


f)

Gently countersink the holes to reduce the chance of the gelcoat cracking.

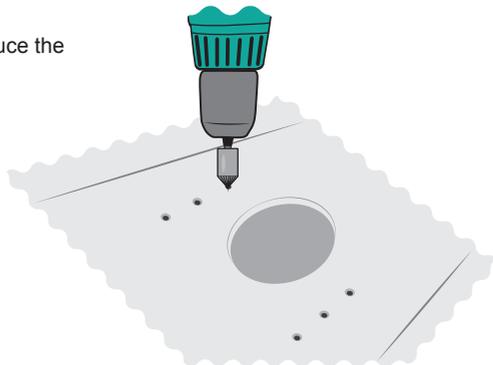


g)

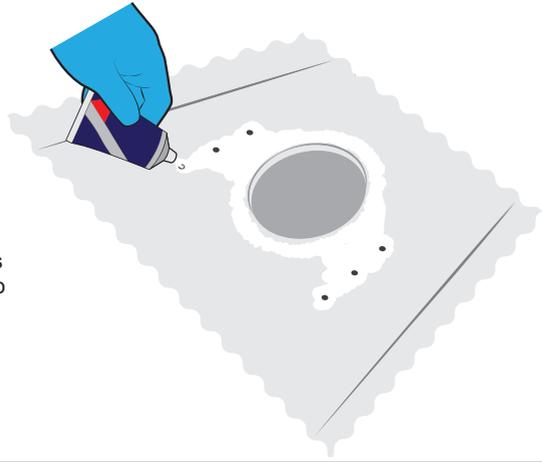

Use Sikaflex to seal the screws and to bed the collar down onto the deck.

h)

Re-fit the part and deck organisers with the supplied screws.

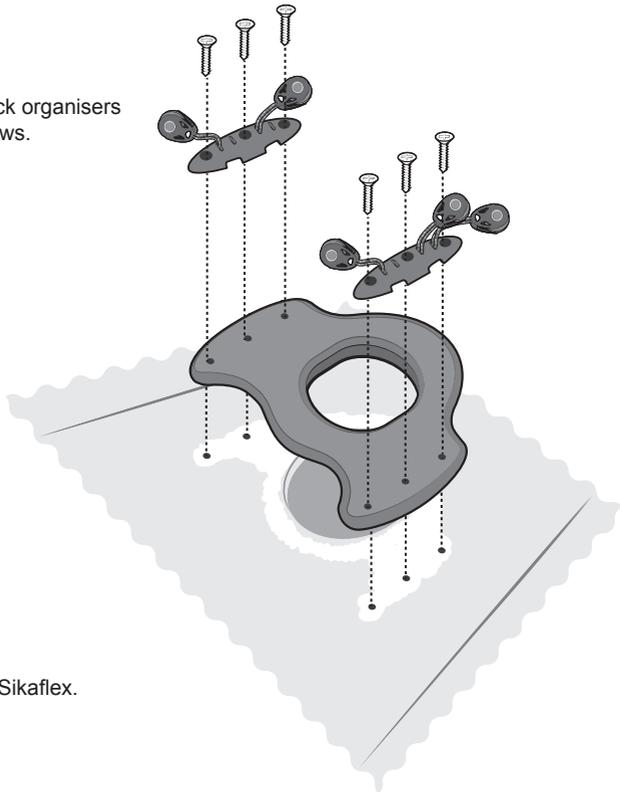

Clean off any excess Sikaflex.