


RIGHTING LINES (optional)


1. Unscrew the rear most Plastic Barrel under the gunwale new the control line cleats.



2. Place the P clip on the Plastic barrel securing screw.
3. Refit the plastic barrel with the p clip pointing down.

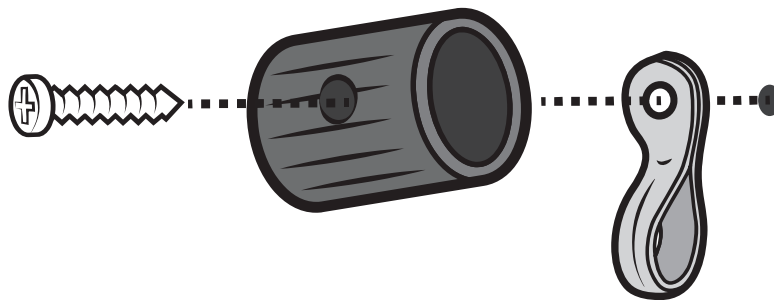


4. Tie a figure of eight stopper knot in the end of the blue rope and thread it through the P clip towards the bow.

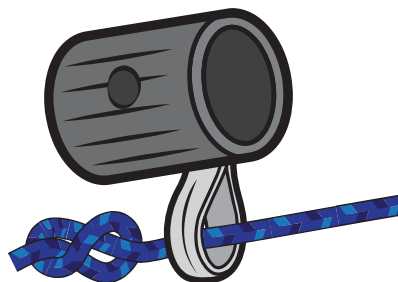

5. Tie two more figure of eight knots 1/3 and 2/3 of the way down the blue rope.





6. Attach the blue rope to the plastic ring with a Knot on a Knot
7. Tie the Blue Elastic onto the plastic hook with a Knot on a Knot
8. Connect the hook onto the ring.

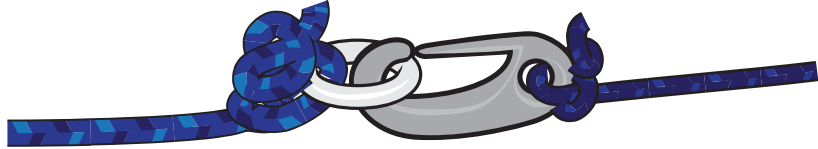

Do not over tighten the screw when refitting

9. Stretch the elastic forwards towards the bow.
10. Do not put the elastic through the forward barrel

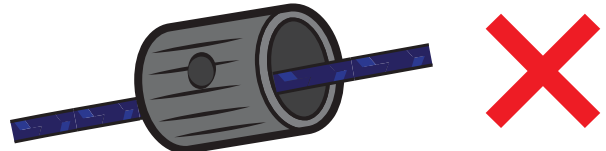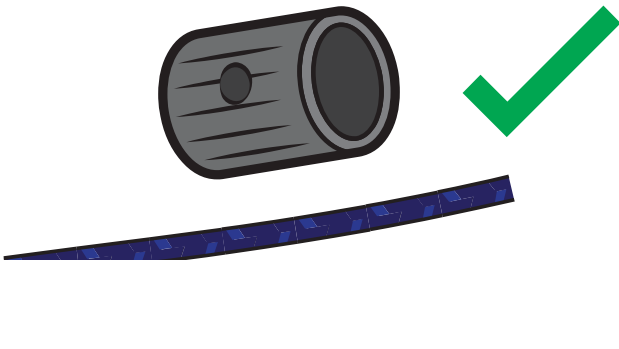

11. Thread the elastic through the bow fitting
12. Repeat the above process on the other side.
13. As you tie the elastic onto the 2nd hook, Pull enough tension in the system to stop the lines drooping down



Make sure there is enough tension in the elastic to stop the lines from drooping down.

