

RS aero

Rigging Guide



Righting Lines V2



PLEASE FOLLOW ASSEMBLY GUIDE IN THE CORRECT ORDER

RS
aero


- a) Under the gunwhale tie the blue rope using the 'knot-on-kont' to the strop holding the Ronstan Shocks used for the control lines.

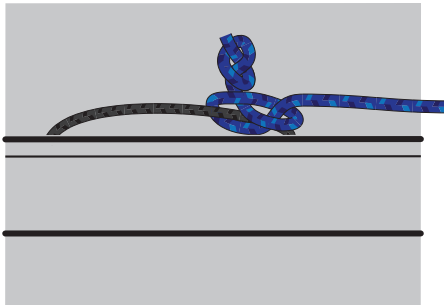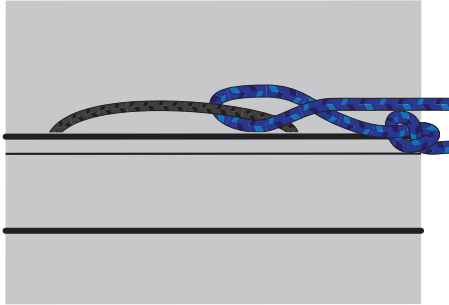

- b) Tie two figure of eight knots 1/3 and 2/3 of the way down the blue rope.



- c) Attach the blue rope to the plastic ring with a Knot on a Knot
- d) Tie the Blue Elastic onto the plastic hook with a Knot on a Knot
- e) Connect the hook onto the ring.

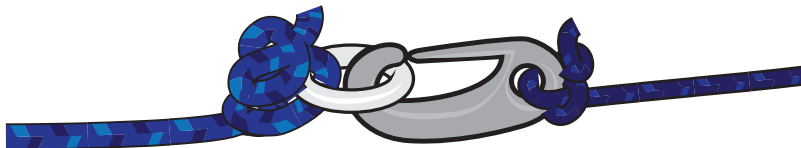

- f) Thread the elastic through the bow fitting
- g) Repeat the above process on the other side.
- h) As you tie the elastic onto the 2nd hook, Pull enough tension in the system to stop the lines drooping down



Make sure there is enough tension in the elastic to stop the lines from drooping down.

